



## **Quality Beekeeping Supplies Pty Ltd**

### **CAPPINGS MELTER – PROCEDURE**

\*\* We do not supply 1 ½ inch ball valve or 1 ½ inch stop cock valve, or ½ inch valves. \*\* These can be purchased at any plumbing supply shop.

\*\* It is your preference as to which one you choose to use.

### **Do not run on an extension lead.**

1. Add cold water to outer tank. Fill to approximately 100 mm from top.
2. Set simmer stat to HIGH. (If purchased Optional)
3. Turn on electricity
4. Once water is hot you can start uncapping.
5. Turn simmer stat back so wax does **not** boil. (If purchased Optional)
- 6. DO NOT ALLOW ELEMENT TO RUN DRY.**
7. Wax and honey will melt together.
8. Place Wax Mould under outlet and open gate. (Not supplied)
9. When wax mould is full, leave to set. Then the wax can be removed and honey is left in the bottom.
10. Turn off electricity and allow to cool, Drain outer tank to store.
11. Contact us if you have any concerns

Quality Beekeeping Supplies  
Unit 4B 10 Jijaws Street  
Sumner Park QLD 4074

Phn : 07 3376 5404

Fax : 07 3376 4548

Web Address : [www.qualitybeekeepingsupplies.com.au](http://www.qualitybeekeepingsupplies.com.au)

© This work is copyright by Quality Beekeeping Supplies Pty Ltd.

